

OPTIPROBE Technical Datasheet

The cost efficient flow indicator

- Simple installation
- · Accurate and stable measurements
- KROHNE quality



CONTENTS

1	Product features	3
	1.1 The cost efficient flow indicator	
2	Technical data	6
	2.1 Technical data	
3	Installation	9
	3.1 General notes on installation 3.2 Installation conditions 3.2.1 Inlet and outlet 3.2.2 Mounting position 3.2.3 T-section 3.2.4 Vibration 3.2.5 Magnetic field 3.2.6 Bends 3.2.7 Open discharge 3.2.8 Control valve 3.2.9 Pump 3.2.10 Temperatures	
4	Electrical connections	14
	4.1 Safety instructions	

1.1 The cost efficient flow indicator

The OPTIPROBE is a magnetic inductive flow indicator for use in conjunction with clean, electrically conductive fluids in pipes with nominal diameters of 80 mm and above.



- ① Connection box
- Process connection flange
- 3 Head with integrated coils and electrodes

Highlights

- · All wetted parts of non-corrosive materials
- · Easy to install
- · Pulsed DC field excitation
- · Wide (bidirectional) measuring range
- · Installation possible in pipelines under pressure

Industries

- Water
- Wastewater

Applications

For clean liquids with a minimum conductivity of 20 μS/cm

1.2 Measuring principle

The OPTIPROBE is inserted through a hole drilled in the pipe. A magnetic coil located in the probe's measuring head generates a pulsed DC field perpendicular to the measuring head. This together with the movement of the fluid induces a voltage proportional to the mean flow velocity. The voltage is picked up by two electrodes fitted to the front of the probe and forwarded to a signal converter, where it is converted into a measured flow speed.

2.1 Technical data

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Download Center).

Measuring system		
Measuring principle	Faraday's law	
Application range	Electrically conductive fluids	
Measured value	Flow velocity	

Design

Features	Wide range of measuring range		
	Bidirectional measuring		
	Non-corrosive materials		
	Two models available		
Models	Model A: insertion length 25 mm		
	Model B: insertion length 25400 mm (variable, replaceable under operating pressure)		
Compact version	With IFC 100 or IFC 300 signal converter		
	IFC 300 only in GKl mode		
Remote version	With IFC 100 or IFC 300 signal converter		
	IFC 300 only in GKI mode		
Nominal diameters	≥ DN80		
Measurement range	-1212 m/s		

Measuring accuracy

Reference conditions	Medium: water		
	Electrical conductivity: ≥ 300 μS/cm		
	Temperature: 1030°C		
Accuracy	Full scale range > 3 m/s: 3% of measured value		
	Full scale range ≤ 3 m/s: 2% of measured value + 2 cm/s		
Repeatability	2% of measured value		

Operating conditions

Temperature	űr	
Process temperature	0100°C	
Ambient temperature	-3055°C	
Pressure		
Connecting flange DN40, PN 16		
Chemical properties	All and the second seco	
Physical condition Electrically conductive liquids		
Electrical conductivity ≥ 20 μS/cm		

Installation conditions

Installation	Pipe must be fully filled for model A.		
	Electrodes must be perpendicular to the flow direction		
	Weld the socket with connecting flange square to the longitudinal axis of the pipeline		
	Probe insertion length minimum 25 mm		
Flow direction	Forward and reverse		
	Arrow on connection box indicates the positive flow direction		
Inlet run	≥ 10 DN		
Outlet run	≥ 5 DN		


Materials

Measuring head	POM (Polyacetal)	
Measuring head sleeve	CrNi steel 1.4301	
Electrodes	Hastelloy C	
Connecting flange	Steel RST 37	
Counterflange	Steel RST 37	
Pipe sleeve	Steel RST 37	
Flange gasket	FKM, FPM	
Junction box	Junction box Die cast aluminum, polyurethane coated	

Electrical connections

Signal cable, type A (DS)	Standard cable, double shielded.	
	Maximum length: 300 m	
Field current cable	Minimum cross section of 2x 1.5 mm ²	
	Maximum length: 300 m	
	No part of delivery	

2.2 Dimensions

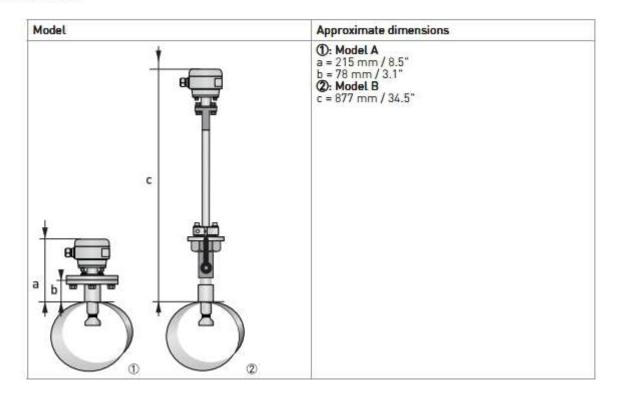

3.1 General notes on installation

Inspect the cartons carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.

Do a check of the packing list to make sure that you have all the elements given in the order.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

3.2 Installation conditions

3.2.1 Inlet and outlet

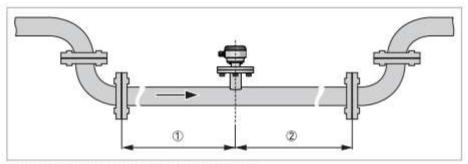


Figure 3-1: Recommended inlet and outlet sections

- ① ≥ 10 DN
- (2) ≥5 DN

3.2.2 Mounting position

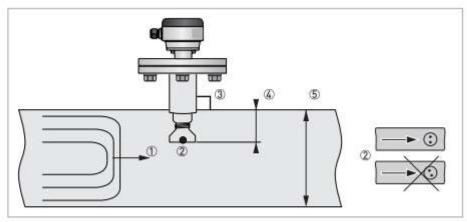


Figure 3-2: Mounting position

- Flow profile must be fully developped.
- 2 Welding instructions: the electrodes must point to the side of the pipeline!
- 3) Insert the OPTIPROBE perpendicular.
- Insertion length ≥ 25mm.
- (5) DN ≥ 80mm.

The OPTIPROBE is a sensor which measures flow speed at one point in the pipe. In case the flow speed has to be converted into a volume, please note that the measured value depends on the used diameter and the insertion length, because the OPTIPROBE decreases the inner surface of the pipe at the measuring section. The corrected GKI value for any other installation condition can be calculated as:

GKI = GKI_{cal} *
$$\left(1 - \frac{30 * L_{insertion}}{0.79 * DN^2}\right)$$

All measures in mm GKl_{cal} is GKl on nameplate

3.2.3 T-section

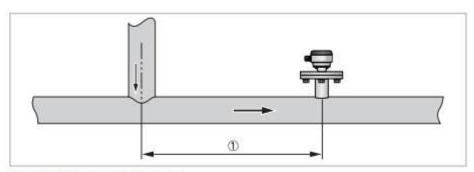


Figure 3-3: Distance after T-sections

① ≥ 30 DN

3.2.4 Vibration



Figure 3-4: Avoid vibrations

3.2.5 Magnetic field

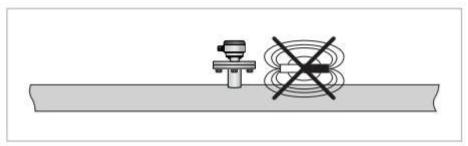


Figure 3-5: Avoid magnetic fields

3.2.6 Bends

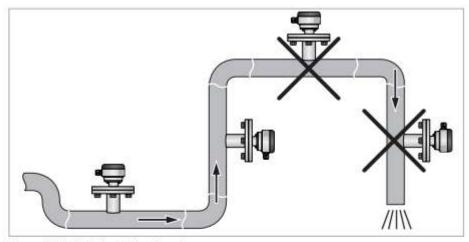


Figure 3-6: Installation in bending pipes

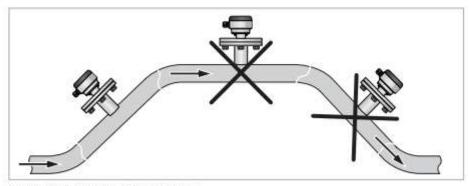


Figure 3-7: Installation in bending pipes

3.2.7 Open discharge

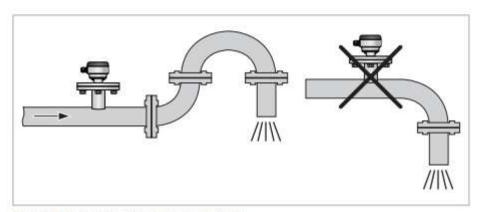


Figure 3-8: Installation before an open discharge

3.2.8 Control valve

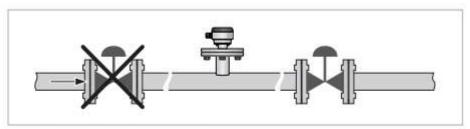


Figure 3-9: Installation before control valve

3.2.9 Pump


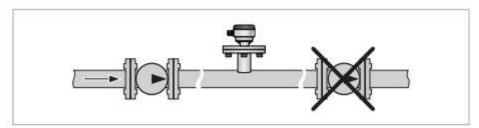


Figure 3-10: Installation after pump

3.2.10 Temperatures

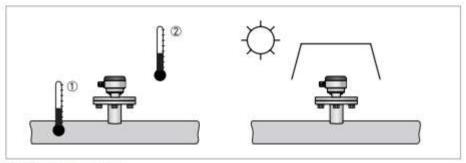

- Process temperature
- 2 Ambient temperature

Protect the device from direct sunlight.

Temperature range	[°C]		[°F]	
	min.	max.	min.	max.
Process temperature	0	100	32	212
Ambient temperature	-30	55	-22	131

4.1 Safety instructions

All work on the electrical connections may only be carried out with the power disconnected. Take note of the voltage data on the nameplate!

Observe the national regulations for electrical installations!

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

4.2 Connection diagram

- The outer shield of the signal cable in the signal converter housing is connected via the strain relief terminal.
- Bending radius of signal and field current cable: ≥ 50 mm / 2".
- The following illustration is schematic. The positions of the electrical connection terminals may vary depending on the type of converter.

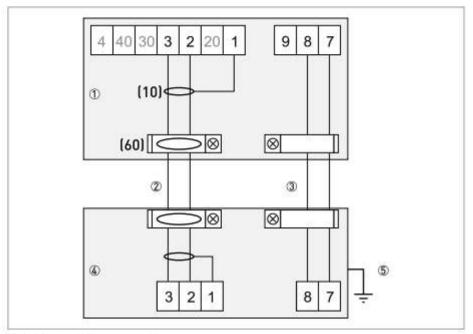


Figure 4-1: Connection diagram

- Electrical terminal compartment in housing of the signal converter for signal and field current cable.
- Signal cable
- Field current cable C
- Connection box for measuring sensor
- 5 Functional ground FE



KROHNE product overview

- Electromagnetic flowmeters
- · Variable area flowmeters
- · Ultrasonic flowmeters
- Mass flowmeters
- · Vortex flowmeters
- Flow controllers
- Level meters
- · Temperature meters
- Pressure meters
- Analysis products
- · Products and systems for the oil & gas industry
- Measuring systems for the marine industry

Head Office KROHNE Messtechnik GmbH Ludwig-Krohne-Straße 5 47058 Duisburg (Germany) Tel.:+49 203 301 0 Fax:+49 203 301 103 89 info@krohne.com

The current list of all KROHNE contacts and addresses can be found at: www.krohne.com

